
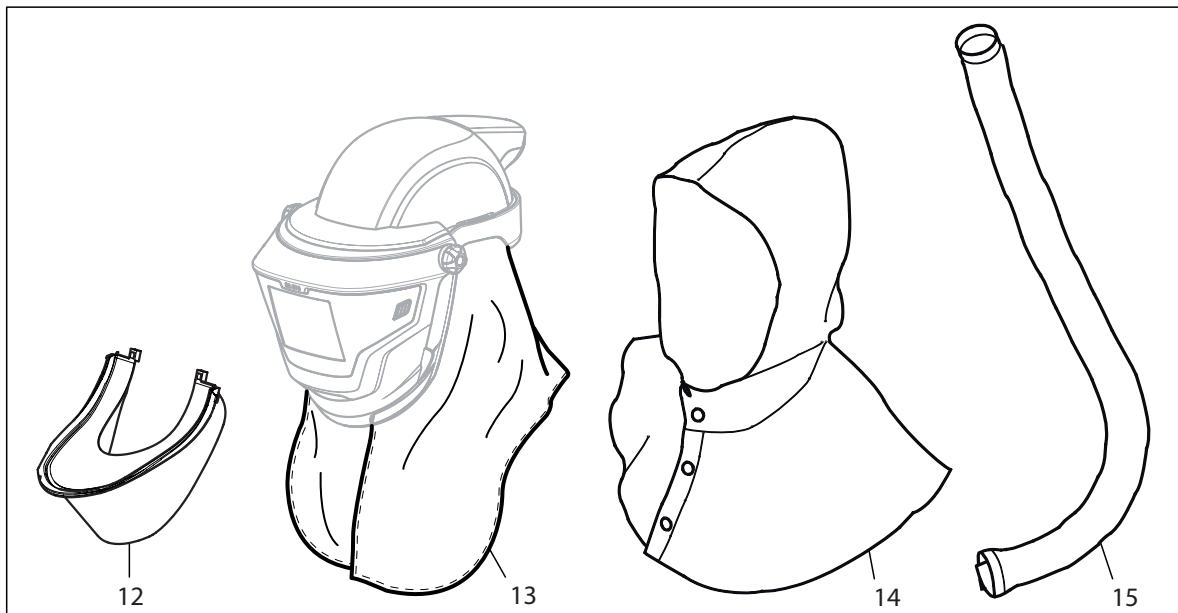


# SR 584

## Spare parts / Accessories

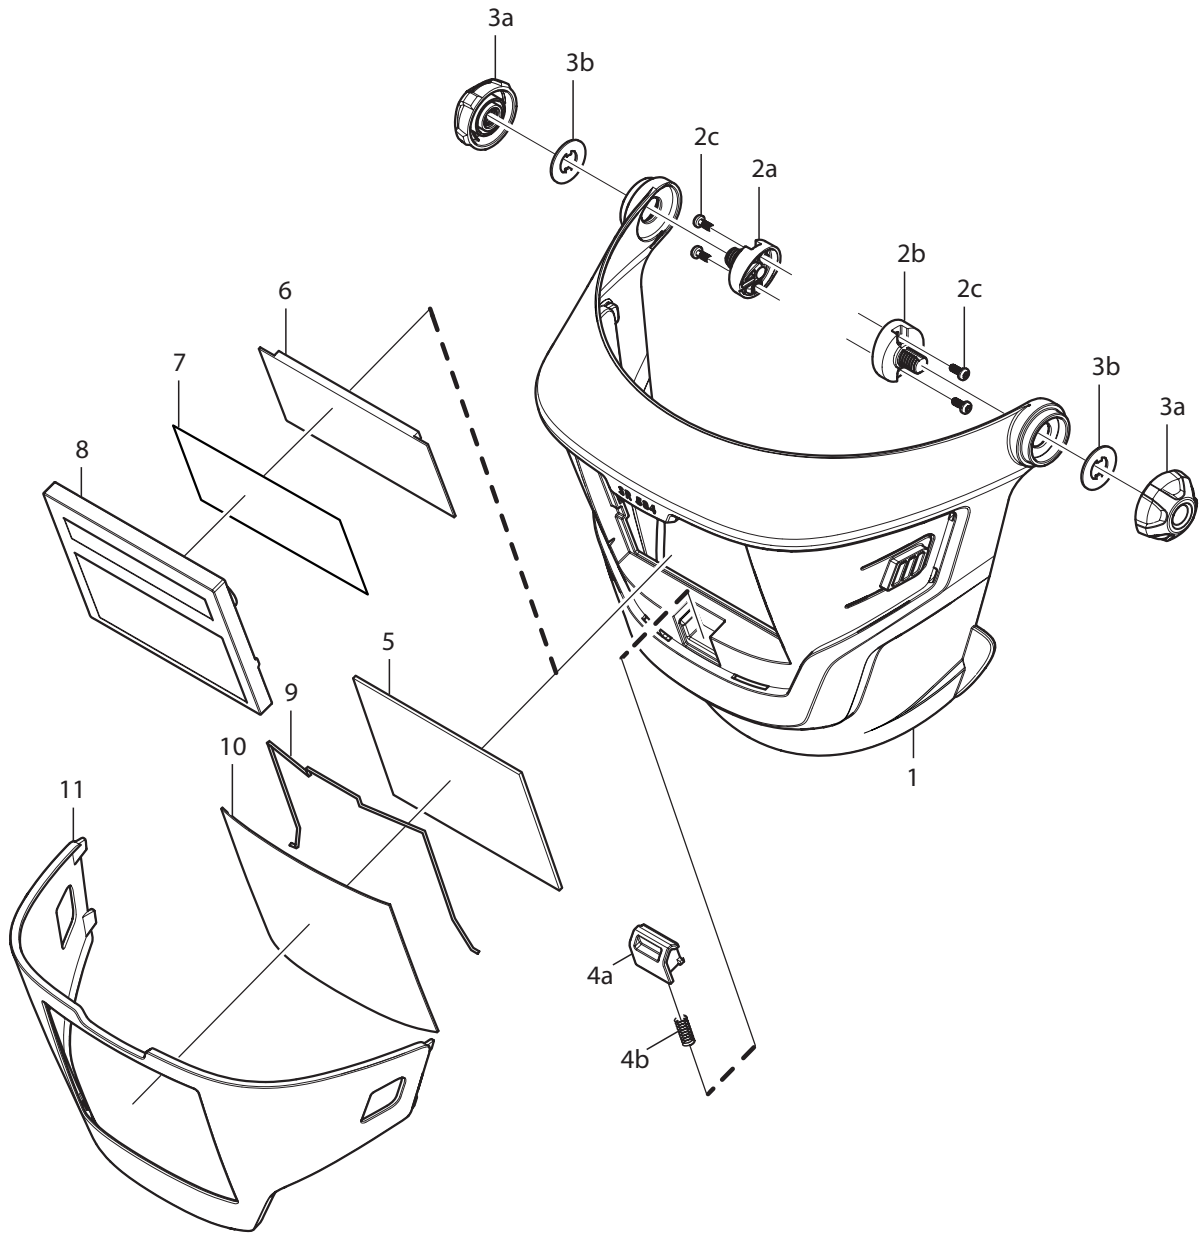

<b>No.</b>	<b>Description</b>	<b>Ordering No.</b>
1.	Frame, welding shield	R06-0816
2.	Adapter R+L 2a. Adapter R x1 2b. Adapter L x1 2c. Screw x4	R06-0820
3.	Knob complete Knob x2 Washer x2	R06-0821
4.	Lock device complete 4a. Lock device 4b. Spring	R06-0819
5.	Welding lens, shade No. 8, SR 59008	T06-4001
	Welding lens, shade No. 9, SR 59009	T06-4002
	Welding lens, shade No. 10, SR 59010	T06-4003
	Welding lens, shade No. 11, SR 59011	T06-4004
	Welding lens, shade No. 12, SR 59012	T06-4005
	Welding lens, shade No. 13, SR 59013	T06-4006
6.	Correction lens, dptr 1.0, SR 59014	T06-4010
	Correction lens, dptr 1.5, SR 59015	T06-4011
	Correction lens, dptr 2.0, SR 59016	T06-4012
	Correction lens, dptr 2.5, SR 59017	T06-4013
7.	Inner protective lens for automatic lens	R06-4009
8.	Automatic lens EN 3/10 SR 59005	T06-4007
	Automatic lens EN 3/11 SR 59006	T06-4008
	Automatic lens EN 4/9-13 SR 59007	T06-4009
9.	Spring for welding lens	R06-0818
10.	Protective lens PC	R06-4008
11.	Holder protective lens	R06-0817
12.	Face seal	T06-8012
13.	Neck and chest protection	T06-8011
14.	Protective hood, SR 59018	T06-4014
15.	Protective hose for the breathing hose	T06-4016